



Saeco Intelia HD8752 LCD Display Panel Replacement

How to replace Saeco Intelia HD8752 LCD Display Panel.

Written By: Jean T



INTRODUCTION

After several years of use, the display of your Saeco Intelia machine might not display properly statuses colors (green/yellow/red). In this tutorial, we will see how to replace the LCD display of the machine.



TOOLS:

- [T10 Torx Screwdriver](#) (1)




PARTS:

- https://philips.encompass.com/item/9700551/Saeco/421941300941/Display_Lcd_128X64_Smr (1)


Step 1 — Disconnecting power




 First, start by putting appliance into standby mode. Then put general switch to 0. Finally, disconnect power cord.


Step 2 — Removing the bean coffee container and the upper casing cover



 Start by removing all coffee beans from the container.

- Remove the screw in the middle of the bean container protection and remove the bean container protection.
- Remove the three screws of the bean container and remove the bean container.
 -  Use a magnet to get them up so that you don't drop them into the grinder hole.
- You can now remove the upper casing cover by pulling it up gently (picture 2).

Step 3 — Removing left side casing

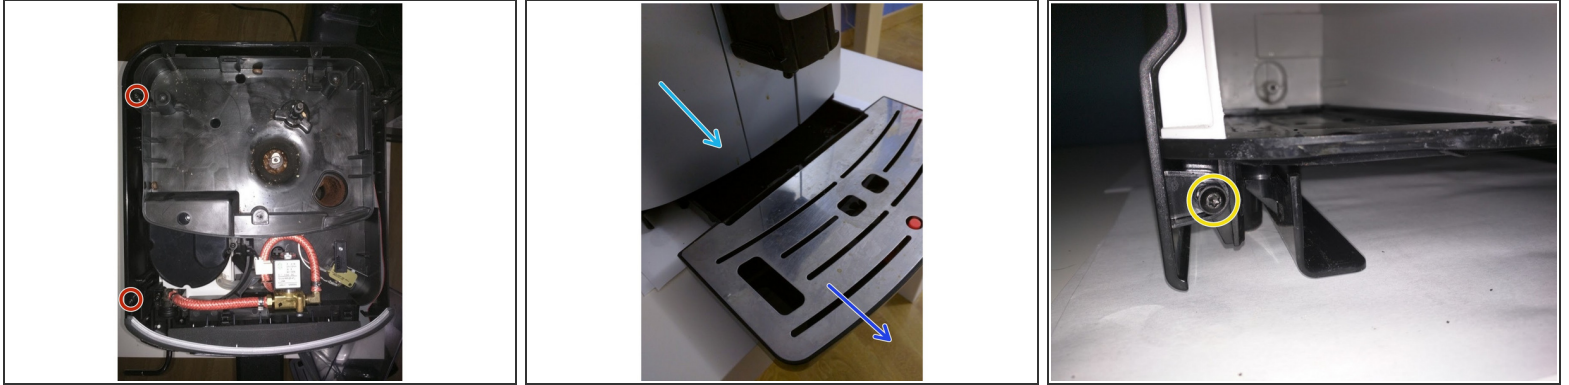

- Remove the two screws on the top of the left panel.
- Remove the drip tray.
- Remove the water tank.
- Below the water tank location, remove the bottom screw of the left side casing.
- Remove the left side casing by pulling it gently. Take care of the nick, at the middle of the panel (above the yellow marked screw).

Step 4 — Removing silver front panel




- If Pannarello is present, remove it first from hot water dispenser by pulling it firmly to the bottom. Next, open up service gate on the right of the appliance.
- Remove the two right screws of the silver front panel.
- ⓘ To remove the next screws, you must have removed left side casing as explained in previous step. Owners of Intelia machine with external milk carafe (HD8753/87)? Please, also have a look at Paul Tast comment below.
- Remove the two left screws of the silver front panel.
- Separate the silver front panel from the main unit by pulling it gently.
- ⚠ Be careful, you can't remove silver front panel without removing first the hot water dispenser !
 - Loosen or remove the two screws of the hot water dispenser.
 - Remove the silver front panel. Take care of hot water dispenser and left and right nicks of the panel.

Step 5 — Removing the touch panel frame




- Remove the three screws of the touch panel frame.

Step 6 — Removing the LCD frame

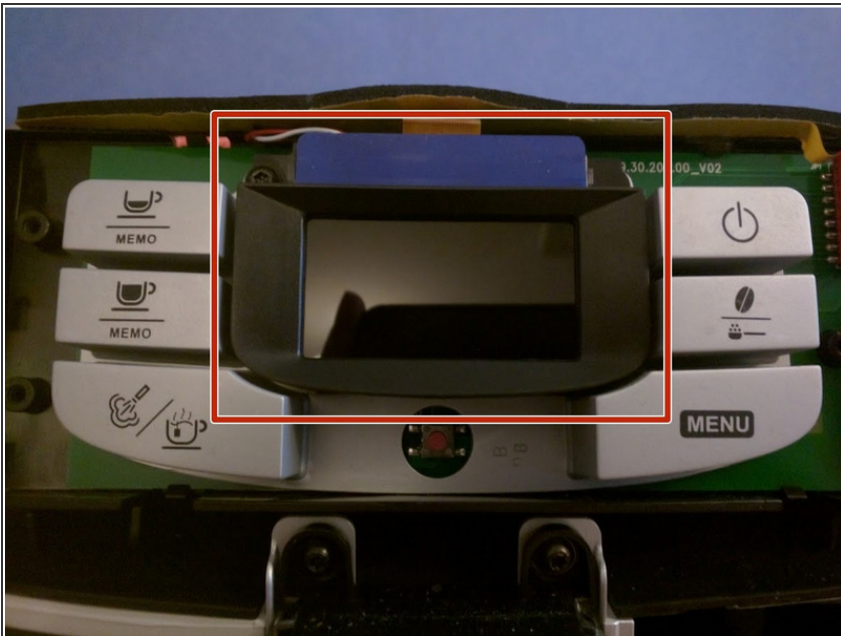

- Remove the LCD black plastic frame. It is simply placed into two necks.

Step 7 — Removing LCD screen

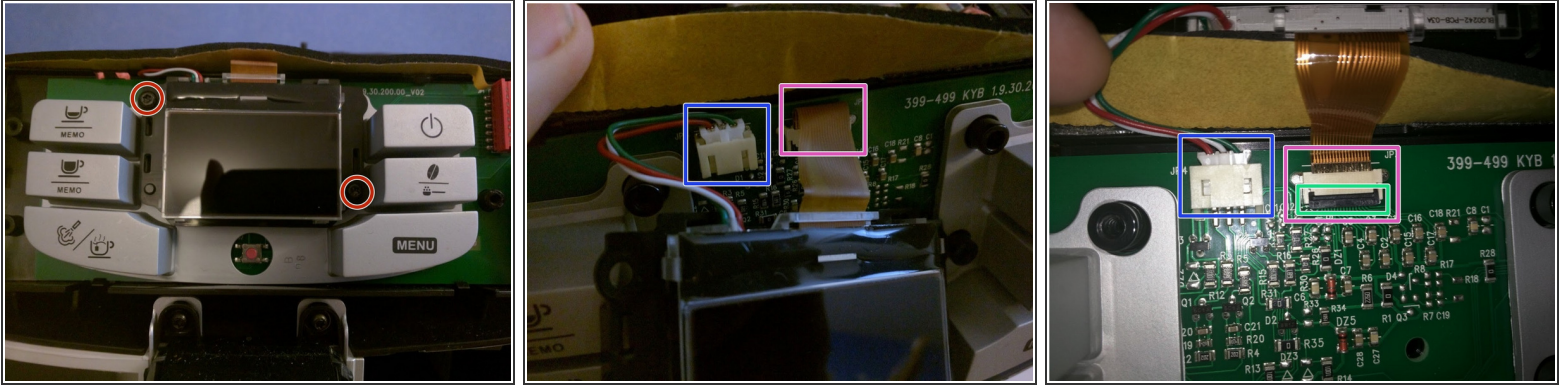

- Remove the two screws on each side of the LCD screen.
 - Disconnect the first connector.
 - Disconnect the other cable.
 - To disconnect the second cable, you need to lift the flap of the connector.
- i** The screen's power cable is longer and stronger than the data cable (ribbon) . Take the power out last and put it in first, because you want to be super gentle with the data ribbon which slides into the holder and is clamped down by a tiny black plastic tab at the bottom of the clamp.
- !** Don't pull the power cable up by the wires. You can use a fork from the kitchen both to pull up the power cable and to flip up the data ribbon black clamp tab.

Step 8 — Install the new LCD screen



- Disassemble the old LCD screen from support frame.
- Clip the new LCD screen to the LCD support frame.
- Reconnect the two cables.

Step 9 — You've done it !



- Reconnect power cable and switch on the appliance. Colors (yellow, green) from the screen should be back :)
- ⓘ If it doesn't work, check connection after turning off the power.
- ★ To reassemble the appliance, follow this guide in reverse order.

To reassemble your appliance, follow the instructions in reverse order.

This document was last generated on 2017-10-01 08:21:44 AM.